

Tools Required

3/32" T-handle allen wrench 5/32" T-handle allen wrench 1/8" T-handle allen wrench 3/16" T-handle allen wrench



SHEARLINE™ ORIGINAL





Get more in-depth instructions and manuals at <u>www.Shearline.com</u>

BLADE REMOVAL & CLEANING

For optimal performance and life, the BLADE and BED BAR must be removed then cleaned every 2 hours of operation. *Watch the video instructions at <u>www.Shearline.com</u>*





Clean BLADE and BED BAR with utility knife.



Get more in-depth instructions and manuals at www.Shearline.com